


PLAN 1:10

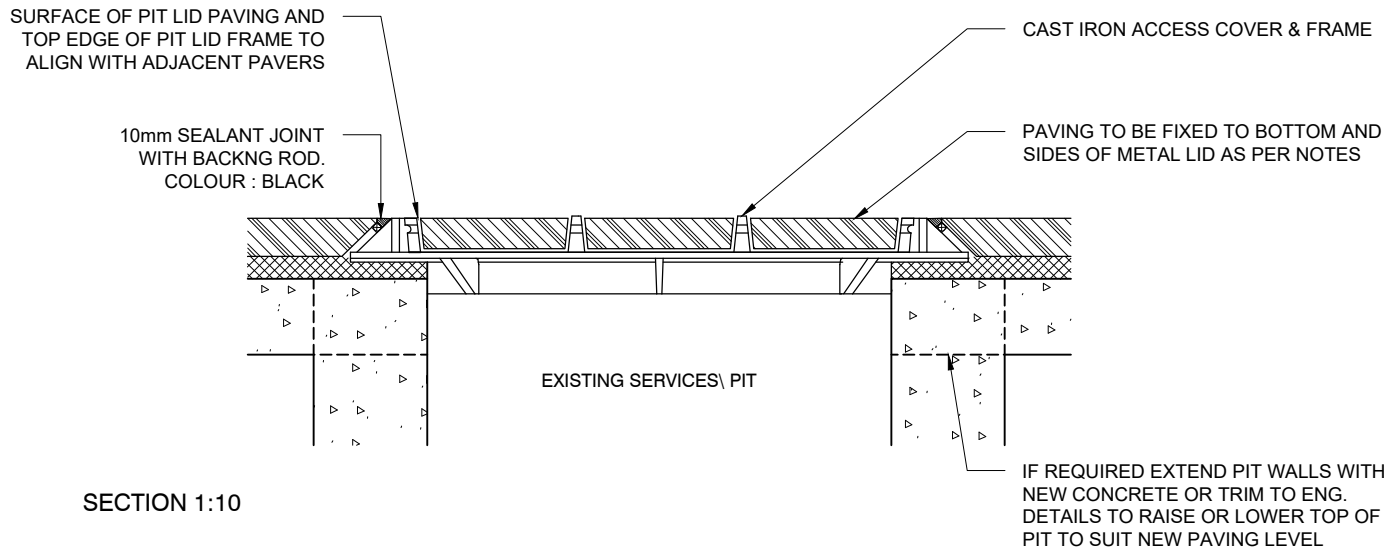

SECTION 1:10

NOTES:

1. CLEAN PIT LID WITH BRUSH AND THEN SOFT BRUSH TO CLEAR RUST FROM LID
2. MOISTEN PAVER AND LID TO AID HYDRATION OF MORTAR MIX
3. USE CEMENT MORTAR WITH FORTIFYING COMPOUND (ARDEX OR APPROVED EQUIVALENT) AS JOINTING MATERIALS
4. USE A RICHER MIX eg: 1:1 CEMENT:SAND FOR THINNER (3-5mm) JOINTS AND 1:2.5 CEMENT:SAND MIX FOR THICKER (12-15mm) JOINTS
5. PIT LID INFILLS TO HAVE APPROX. 3mm GAP ON SIDES SO AS NOT TO TOUCH THE LID
6. GAPS ON SIDES SHOULD BE GROUTED WITH RICH CEMENT SAND MIX WITH FORTIFYING COMPOUND.
7. TO ENSURE THE SERVICE PIT IS STILL ACCESSIBLE AND FIT FOR USE THE RELEVANT AUTHORITY IS TO PROVIDE SIGN OFF / APPROVAL
8. PIT COVERS IN THE FOOTPATH SHALL COMPLY WITH CLASS 'C' LOADING AND FOR TRAFFICABLE AREA, PIT COVERS SHALL COMPLY WITH CLASS 'D' LOADING.
9. ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE STATED.