


STEP IRON ARRANGEMENT

ELEVATION 1:10

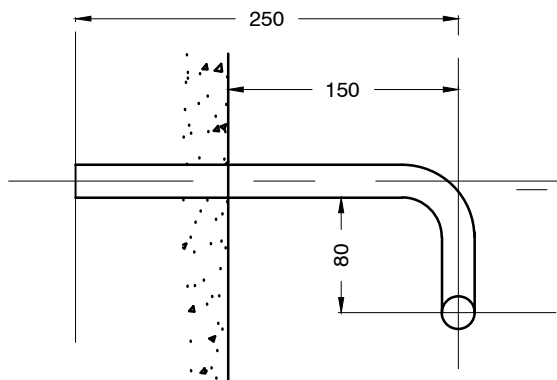

SECTION 1:5

NOTES:

1. STEP IRONS MUST BE FABRICATED FROM 20mm Ø M.S.
2. ALL BENDS MUST BE FORMED AROUND 12mm diameter PIN.
3. STEP IRONS MUST BE HOT-DIPPED GALVANISED.
4. STEP IRONS MUST BE LOCATED:
  - (i) DIRECTLY BELOW THE OPENING OF THE COVER.
  - (ii) DESIRABLY ON A WALL WITHOUT PIPE OPENINGS.
  - (iii) DESIRABLY ON ONE OF THE LONG SIDES OF THE PIT.
8. ALL DIMENSIONS IN MILLIMETRES UNLESS OTHERWISE STATED.